
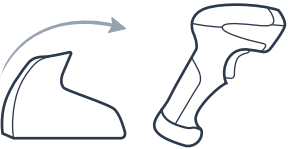







SmartPOS V56 Wireless Scanner

Programming Sheet

Charge the wireless unit Place the scanner's wireless unit on the base for a few minutes to recharge.		
Connect the scanner to SmartPOS	Action	Feedback
Pair the scanner's wireless unit to the base.	1. Take the scanner off the base. 	
	2. Press and hold the trigger for at least 10 seconds. 	The light on the wireless unit will turn green.
Scan the programming codes in order, ensuring none are skipped and the sequence is followed precisely. Scan the next code only after receiving feedback from the previous scan.	1. 	Beep
	2. 	Beep
	3. 	Beep
Switch scanning mode	Action	Feedback
The scanner can either automatically read a barcode upon detection or require pressing the trigger to scan the barcode (default). Only one scanning mode can be active at a time.	Scan the programming code to switch to a different scanning mode. If you are in manual mode, which requires pressing the trigger, it will switch to automatic scanning, and vice versa. 	Beep