 


# SmartPOS 1202 Wireless Scanner

## Programming Sheet

Scan the barcode to reset the scanner to SmartPOS compatibility mode.



Scanner setup	Step	Code	Function
<p>Start with programming code 1 and proceed in order. Only scan each code when instructed; scanning out of sequence may disrupt the scanner's functionality.</p>	1		Enter programming mode
	2		Enable AIM ID
	3		Convert UPC-E to UPC-A
	4		Exit programming mode
Switch scanning mode	Step	Code	Function
<p>SmartPOS 1202 barcode scanner can operate in automatic or manual scanning modes, tailored for different environments and workflows. To change the scanning mode, start with programming code 1 and proceed in order.</p>	1		Enter programming mode
<p>Only one scanning mode can be set at a time. Scanning a different barcode in Step 2 will override the previously selected mode.</p>	2		The scanner will <b>automatically</b> read a barcode upon detection
			The user must <b>press the trigger</b> to scan each barcode
	3		Save changes and exit programming mode
Adjust beep volume			🔊- Low beep
<p>To adjust the scanner's beep sound volume, simply scan the corresponding barcode. Scanning a different barcode will update the volume to the newly selected setting.</p>			🔊+ Loud beep
			🔊x No beep